

PC Keyboard Combos for Projector Connection

Windows laptops are not as good at auto-sensing projectors as the Mac laptops are. Most have a key combination that, when pressed, will cycle between displaying the image on the laptop, on the screen, and on both. This key combination varies by manufacturer, of course. Some of the most common are:

Manufacturer	Key Combo
Acer	Fn + F5
Compaq	Fn + F4
Dell	Fn + F8
Gateway	Fn + F4
HP (not all models)	Fn + F5
IBM / Lenovo	Fn + F7 (Choose "Dual Display:XGA....")
Sony	Fn + F7
Toshiba	Fn + F5